


METRO GRAPHIC DISPLAY ASSEMBLY



1 Position Posts onto Spigotted Base



2 Tighten Grub Screws

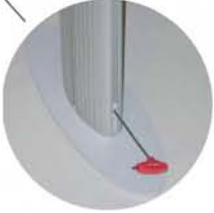

3 Raise Extension Bars and fix into Position



4 Position Upper Post onto Extension Bars



Position Upper Frame onto Lower Frame Extension Bars



7 Raise Frame Extension Bars into Position



7 Tighten Stub Beam Grub Screws



6 Twist Stub Beam into Position



5 Tighten Extension Bar Grub Screws



8



9

METRO GRAPHIC DISPLAY ASSEMBLY



10



Repeat as 8 & 9

11



12

Push Nylon Bolt through hole.



Screw wing nut onto bolt. Repeat in 4 positions.



13



14

Offer post to End Frame



15



16

Repeat as 6 & 7



17

